

WWW.GINO-MIDI.NL

Midi Messages Small-MIDI 3

| Midi Channel 1 | Jumper positie 1 | | Registers / stops | Schakelaar / switch # |
|----------------|------------------|----|-------------------|-----------------------|
| Program Change | C0 | 00 | Register/Stop 1 | 1 |
| Program Change | C0 | 01 | Register/Stop 2 | 2 |
| Program Change | C0 | 02 | Register/Stop 3 | 3 |
| | | | | |
| Program Change | C0 | 3F | Register/Stop 64 | 64 |

| Midi Channel 1 | Jumper positie 2 | | | Manual or Pedal | Schakelaar / switch # |
|----------------|------------------|----|----|-----------------|-----------------------|
| Note On | 90 | 24 | 7F | C Groot | C2 1 |
| Note Off | 80 | 24 | 7F | C Groot | C2 1 |
| Note On | 90 | 25 | 7F | Cis Groot | C#2 2 |
| Note Off | 80 | 25 | 7F | Cis Groot | C#2 2 |
| | | | | | |
| Note On | 90 | 60 | 7F | c4 | C7 61 |
| Note Off | 80 | 60 | 7F | c4 | C7 61 |
| All Notes Off | Bx | 7B | 00 | PANIC | 64 |

| Midi Channel 2 | Jumper positie 3 | | | Manual or Pedal | Schakelaar / switch # |
|----------------|------------------|----|----|-----------------|-----------------------|
| Note On | 91 | 24 | 7F | C Groot | C2 1 |
| Note Off | 81 | 24 | 7F | C Groot | C2 1 |
| Note On | 91 | 25 | 7F | Cis Groot | C#2 2 |
| Note Off | 81 | 25 | 7F | Cis Groot | C#2 2 |
| | | | | | |
| Note On | 91 | 60 | 7F | c4 | C7 61 |
| Note Off | 81 | 60 | 7F | c4 | C7 61 |

| Midi Channel 3 | Jumper positie 4 | | | Manual or Pedal | Schakelaar / switch # |
|----------------|------------------|----|----|-----------------|-----------------------|
| Note On | 92 | 24 | 7F | C Groot | C2 1 |
| Note Off | 82 | 24 | 7F | C Groot | C2 1 |
| Note On | 92 | 25 | 7F | Cis Groot | C#2 2 |
| Note Off | 82 | 25 | 7F | Cis Groot | C#2 2 |
| | | | | | |
| Note On | 92 | 60 | 7F | c4 | C7 61 |
| Note Off | 82 | 60 | 7F | c4 | C7 61 |