

WWW.GINO-MIDI.NL

Midi Messages BIGMIDI P-C Modus = ON

Midi Channel 1	Jumper positie 1		Registers / stops	MIDI Key#	Schakelaar / switch #
Program Change	C0	00	Register/Stop 1		1
Program Change	C0	01	Register/Stop 2		2
Program Change	C0	02	Register/Stop 3		3
Program Change	C0	3F	Register/Stop 64		64

Midi Channel 2	Jumper positie 2		Manual or Pedal		Schakelaar / switch #
Note On	91	24	7F	C Groot	C2 1
Note Off	81	24	7F	C Groot	C2 1
Note On	91	25	7F	Cis Groot	C#2 2
Note Off	81	25	7F	Cis Groot	C#2 2
Note On	91	60	7F	c4	C7 61
Note Off	81	60	7F	c4	C7 61
Volume	B1	07	XX	XX = Volume form 00 - 7F in steps of 2	

Midi Channel 3	Jumper positie 3		Manual or Pedal		Schakelaar / switch #
Note On	92	24	7F	C Groot	C2 1
Note Off	82	24	7F	C Groot	C2 1
Note On	92	25	7F	Cis Groot	C#2 2
Note Off	82	25	7F	Cis Groot	C#2 2
Note On	92	60	7F	c4	C7 61
Note Off	82	60	7F	c4	C7 61
Volume	B2	07	XX	XX = Volume form 00 - 7F in steps of 2	

Midi Channel 4	Jumper positie 4		Manual or Pedal		Schakelaar / switch #
Note On	93	24	7F	C Groot	C2 1
Note Off	83	24	7F	C Groot	C2 1
Note On	93	25	7F	Cis Groot	C#2 2
Note Off	83	25	7F	Cis Groot	C#2 2
Note On	93	60	7F	c4	C7 61
Note Off	83	60	7F	c4	C7 61
Volume	B3	07	XX	XX = Volume form 00 - 7F in steps of 2	

Midi Channel 1	Jumper positie 5		Registers / stops		Schakelaar / switch #
Program Change	C0	40	Register/Stop 65		65
Program Change	C0	41	Register/Stop 66		66
Program Change	C0	42	Register/Stop 67		67
Program Change	C0	7F	Register/Stop 128		128

Midi Channel 6	Jumper positie 6		Manual or Pedal		Schakelaar / switch #
Note On	95	24	7F	C Groot	C2 1
Note Off	85	24	7F	C Groot	C2 1
Note On	95	25	7F	Cis Groot	C#2 2
Note Off	85	25	7F	Cis Groot	C#2 2
Note On	95	60	7F	c4	C7 61
Note Off	85	60	7F	c4	C7 61
Volume	B5	07	XX	XX = Volume form 00 - 7F in steps of 2	

Midi Channel 7	Jumper positie 7		Manual or Pedal		Schakelaar / switch #
Note On	96	24	7F	C Groot	C2 1
Note Off	86	24	7F	C Groot	C2 1
Note On	96	25	7F	Cis Groot	C#2 2
Note Off	86	25	7F	Cis Groot	C#2 2
Note On	96	60	7F	c4	C7 61
Note Off	86	60	7F	c4	C7 61
Volume	B6	07	XX	XX = Volume form 00 - 7F in steps of 2	

Midi Channel 8	Externe verbinding van TP1 naar TP9		Manual or Pedal		Schakelaar / switch #
Note On	97	24	7F	C Groot	C2 1
Note Off	87	24	7F	C Groot	C2 1
Note On	97	25	7F	Cis Groot	C#2 2
Note Off	87	25	7F	Cis Groot	C#2 2
Note On	97	60	7F	c4	C7 61
Note Off	87	60	7F	c4	C7 61
Volume	B7	07	XX	XX = Volume form 00 - 7F in steps of 2	

Midi kanaal nummers kunnen gewijzigd worden met de LCD&SWITCH print
Midi channel numbers can be changed by the LCD&SWITCH print.

Midi Messages BIGMIDI P-C Modus = OFF

Midi Channel 1	Jumper positie 1			Manual or Pedal or Registers/Stops	MIDI Key#	Schakelaar / switch #
Note On	90	24	7F	C Groot	C2	1
Note Off	80	24	7F	C Groot	C2	1
Note On	90	25	7F	Cis Groot	C#2	2
Note Off	80	25	7F	Cis Groot	C#2	2
Note On	90	60	7F	c4	C7	61
Note Off	80	60	7F	c4	C7	61

Midi Channel 2	Jumper positie 2			Manual or Pedal or Registers/Stops	MIDI Key#	Schakelaar / switch #
Note On	91	24	7F	C Groot	C2	1
Note Off	81	24	7F	C Groot	C2	1
Note On	91	25	7F	Cis Groot	C#2	2
Note Off	81	25	7F	Cis Groot	C#2	2
Note On	91	60	7F	c4	C7	61
Note Off	81	60	7F	c4	C7	61
Volume	B1	07	XX	XX = Volume form 00 - 7F in steps of 2		

Midi Channel 3	Jumper positie 3			Manual or Pedal or Registers/Stops	MIDI Key#	Schakelaar / switch #
Note On	92	24	7F	C Groot	C2	1
Note Off	82	24	7F	C Groot	C2	1
Note On	92	25	7F	Cis Groot	C#2	2
Note Off	82	25	7F	Cis Groot	C#2	2
Note On	92	60	7F	c4	C7	61
Note Off	82	60	7F	c4	C7	61
Volume	B2	07	XX	XX = Volume form 00 - 7F in steps of 2		

Midi Channel 4	Jumper positie 4			Manual or Pedal or Registers/Stops	MIDI Key#	Schakelaar / switch #
Note On	93	24	7F	C Groot	C2	1
Note Off	83	24	7F	C Groot	C2	1
Note On	93	25	7F	Cis Groot	C#2	2
Note Off	83	25	7F	Cis Groot	C#2	2
Note On	93	60	7F	c4	C7	61
Note Off	83	60	7F	c4	C7	61
Volume	B3	07	XX	XX = Volume form 00 - 7F in steps of 2		

Midi Channel 5	Jumper positie 5			Manual or Pedal or Registers/Stops	MIDI Key#	Schakelaar / switch #
Note On	94	24	7F	C Groot	C2	1
Note Off	84	24	7F	C Groot	C2	1
Note On	94	25	7F	Cis Groot	C#2	2
Note Off	84	25	7F	Cis Groot	C#2	2
Note On	94	60	7F	c4	C7	61
Note Off	84	60	7F	c4	C7	61

Midi Channel 6	Jumper positie 6			Manual or Pedal or Registers/Stops	MIDI Key#	Schakelaar / switch #
Note On	95	24	7F	C Groot	C2	1
Note Off	85	24	7F	C Groot	C2	1
Note On	95	25	7F	Cis Groot	C#2	2
Note Off	85	25	7F	Cis Groot	C#2	2
Note On	95	60	7F	c4	C7	61
Note Off	85	60	7F	c4	C7	61
Volume	B5	07	XX	XX = Volume form 00 - 7F in steps of 2		

Midi Channel 7	Jumper positie 7			Manual or Pedal or Registers/Stops	MIDI Key#	Schakelaar / switch #
Note On	96	24	7F	C Groot	C2	1
Note Off	86	24	7F	C Groot	C2	1
Note On	96	25	7F	Cis Groot	C#2	2
Note Off	86	25	7F	Cis Groot	C#2	2
Note On	96	60	7F	c4	C7	61
Note Off	86	60	7F	c4	C7	61
Volume	B6	07	XX	XX = Volume form 00 - 7F in steps of 2		

Midi Channel 8	Externe verbinding van TP1 naar TP9	Jumper positie 7			Manual or Pedal or Registers/Stops	MIDI Key#	Schakelaar / switch #
Note On	97	24	7F	C Groot	C2	1	
Note Off	87	24	7F	C Groot	C2	1	
Note On	97	25	7F	Cis Groot	C#2	2	
Note Off	87	25	7F	Cis Groot	C#2	2	
Note On	97	60	7F	c4	C7	61	
Note Off	87	60	7F	c4	C7	61	
Volume	B7	07	XX	XX = Volume form 00 - 7F in steps of 2			

Midi kanaal nummers kunnen gewijzigd worden met de LCD&SWITCH print
Midi channel numbers can be changed by the LCD&SWITCH print.